

INSTRUCTION GUIDE

Key Entry Alarm – HS4313

Congratulations on a wise purchase!

ENCLOSED YOU WILL FIND:

- Alarm
- Magnet
- Two keys
- Double-sided tape
- Optional screws

BATTERIES NEEDED (not included):

- Two AAA alkaline batteries

TOOLS NEEDED:

- Small Phillips head screwdriver
- Small flat head screwdriver

INSTALLATION

Alarm should be mounted on door and magnet on door frame, or vice versa using the adhesive strips or screws provided. They should be located approximately 24 to 36 inches above the door knob, next to the edge of the door. Remove battery compartment cover, then follow these guidelines for simple and easy installation:

1. Screw Mounting

- a) Determine the best position for alarm. Insert and tighten one screw until it is approximately 1/8 inch from the mounting surface.
- b) Hang alarm on mounting screws and pull it downwards until the screws are positioned in the small end of the key-holes.
- c) Remove the bottom cover of the magnet using a flat head screwdriver, mount the bottom cover with two screws, snap in the magnet top enclosure on the bottom cover, the arrow on the magnet should point to the center line of the alarm.

2. Adhesive Tape Mounting

Clean and dry the surface on the door and door frame thoroughly at the location where the alarm is to be installed.

- a) Peel off one side of the protective cover on the adhesive strips provided and attach them to the back of the alarm and the magnet.
- b) Peel off the other protective cover and press alarm firmly against the door or door frame in the location chosen.
- c) Peel off the other protective cover and press the magnet firmly against the door frame or door with arrow pointing to the center line of the alarm.

3. Battery Connection

Install two AAA batteries. Replace the compartment cover and fasten it with screw.

4. The alarm is in operation.

Note: The distance between the alarm and the magnet should be as close as possible and it should not exceed 1/4 inch.

INSTRUCTIONS

The alarm is designed with a two position mode switch, i.e., Instant alarm and Delayed alarm.

Instant alarm: With the mode switch in this position and the key switch in the “ON” position, the alarm sounds instantly when the door is opened and will continue for 90 seconds. This mode is used when the homeowner is inside the house.

Delayed alarm: When the homeowner is away, the key switch should be put to the “ON” position and operation to Delayed alarm. There will be approximately 12-18 seconds delay time to exit and close the door. The green indicator lights up during this period. After the 12-18 seconds delay, the alarm arms automatically. When the homeowner returns from outside, he has approximately 12 seconds to open the door and turn off the key switch. No alarm will occur. The red indicator lights up during

this period. However, if the unit is not turned off by the end of the delay, the alarm automatically sounds and will continue for 90 seconds or until the key switch is turned off.

Note: To disable the alarm sooner than 90 seconds, set the key switch in the “OFF” position.

Intrusion indicator: The LED flashes green light to indicate an intrusion was detected. Set the key switch in the “OFF” position to turn off the indicator.

Low battery indicator: In either ON/OFF mode of the key switch, the LED flashes red light to indicate the installed batteries need to be replaced.

LIMITED WARRANTY

The product you have purchased is guaranteed against defects in workmanship and materials for the period stated on the package. Warranties implied by law are subject to the same time period limitation. Some states do not allow limitations on how long an implied warranty lasts, so this time limitation may not apply to you.

If the product fails due to a manufacturing defect during normal use, return the product and dated sales receipt to the store where purchased for replacement OR send the product and the dated sales receipt to:

**Lamson & Sessions
25701 Science Park Drive
Cleveland, OH 44122 USA
Attn: LHP Customer Service**

Not Covered - Batteries, light bulbs, and other expendable items are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification of the product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or other products used in conjunction with, but are not supplied by, Lamson & Sessions.

All requests for replacement must include a **dated sales receipt** (copies accepted). LAMSON & SESSIONS IS NOT LIABLE FOR LOST PROFITS, INDIRECT, SPECIAL, EXEMPLARY, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING WITHOUT LIMITATION ANY SUCH DAMAGES DUE TO IMPROPER WIRING OR MISUSE OF THE PRODUCT. As some states do not allow the exclusion or limitation of incidental or consequential damages, the above limitation and exclusion may not apply to you.

ALSO AVAILABLE FROM CARLON:

- Extend-A-Chime® – lets you hear your existing wired doorbell in remote areas of your home or yard
- Plug-in and Battery Doorbells and Chimes
- On/Off Remote Switches
- Touch and Automatic Lighting Controls

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Carlton®

25701 Science Park Drive
Cleveland, Ohio 44122
www.lamson-sessions.com
©2004 LAMSON & SESSIONS